
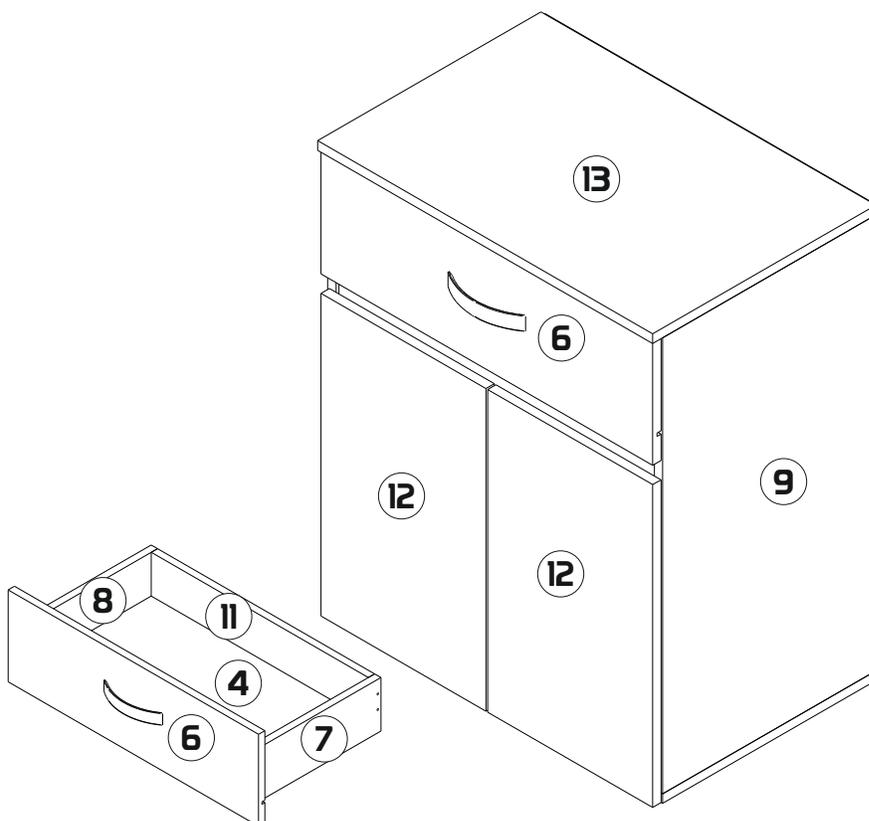
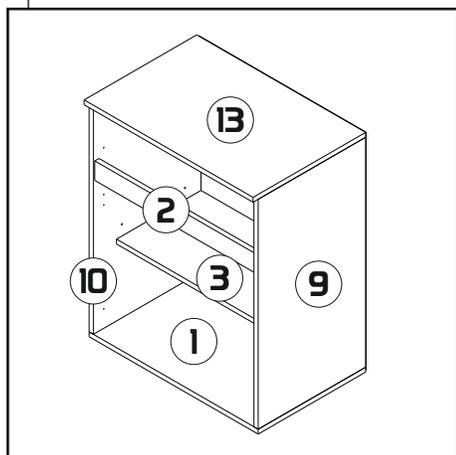



INSTRUCCIONES DE ENSAMBLE

Encuétranos en: www.practimac.com y [YouTube/practimac](https://www.youtube.com/practimac)


CÓMODA AVELLANA P00089CO-HB / P00089CO-MI / P00089CO-WE / P00089CO-RO

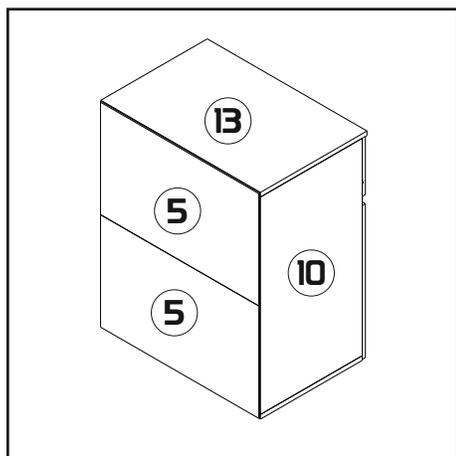


HERRAJES

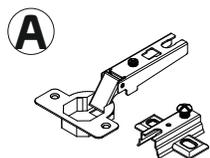


A
4 Und.
Bisagra parche
35mm econ
20040001

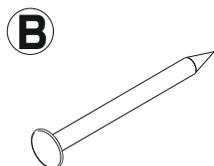


B
24 Und.
Puntilla de acero 3/4
20020006

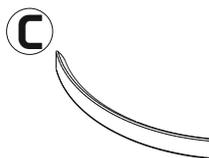


C
1 Und.
Manija plana abs
níquel mpl128
20010029

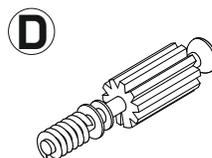

D
6 Und.
Perno minifix
0002715

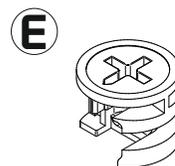


E
6 Und.
Tuerca minifix
0002715

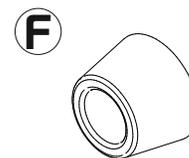


F
4 Und.
Pata para mueble
30x20
HB-MI-WE - 20080015
RO - 0004678



G
1 Und.
Corredera metálica
(300mm)
20080038

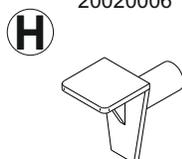

H
4 Und.
Soporte entrepaño
HB-MI-WE - 20060014
RO - 20060015

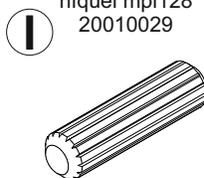

I
6 Und.
Tarugo 8x30
20030001



J
28 Und.
Tornillo 6x5/8
ave phi zinc
aglomerado
0004705




K
8 Und.
Tornillo 6x2" ave phi
autoperforante
0000152


Practimac
tu espacio, tu vida.

RECOMENDACIONES DE ENSAMBLE

Minifix

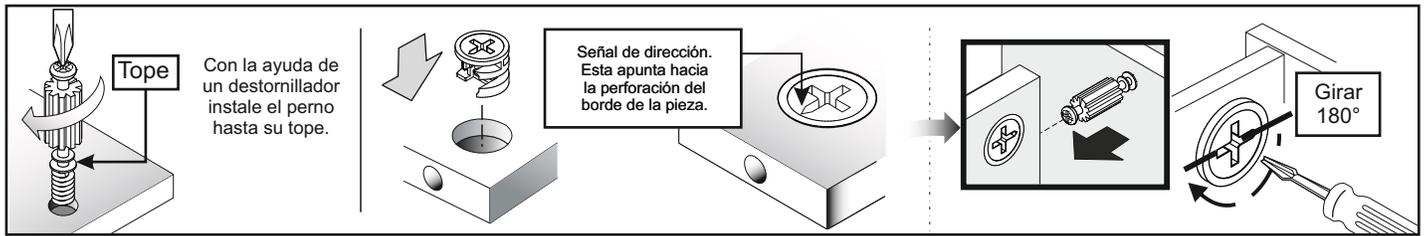

Nivelación de las puertas

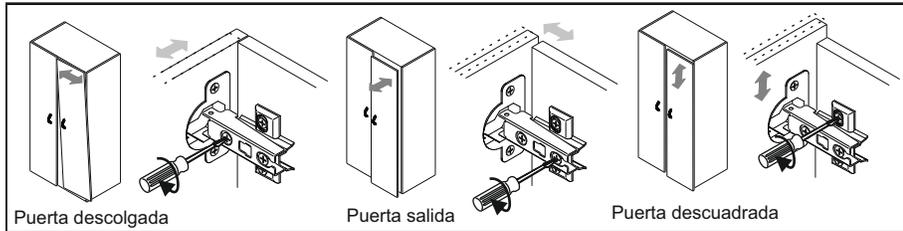

Tarugos



